DO NOT SCALE FROM THIS DRAWING. USE WRITTEN DIMENSIONS ONLY. ANY DISCREPANCIES OR SUGGESTED REVISIONS TO BE REPORTED TO TAYLOR


REVISIONS TO BE REPORTED TO TATLES.
WIMPEY UK.
DRAWING TO BE READ IN CONJUNCTION
WITH LATEST TAYLOR WIMPEY NATIONAL
CONSTRUCTION SPECIFICATION.


AIr Barrier Conthuity.

Apply continuous ribbons of adhesive along top of wall. Apply expanding foam tope or sealant under the skirting & continuous bead of sealant to the back of the skirting prior to fixing. Where there is no skirting apply expanding foam tope or sealant between plasterboard & floor. Seal all penetrations in the plasterboard.

LEGEND:

- 1. Brickwork/stone cut to rake of roof.
- 2. Overhang formed by 150mm wide undercloak.
- Compressed insulation quilt to top of gable and underside of roofing felt to close cavity.
- Min 100mm wide mortar bedding with a mix of 1:3 cement: sand with plasiciser.
- 5. Packer.
- 6. Level top of gable blockwork with mortar to correct pitch.

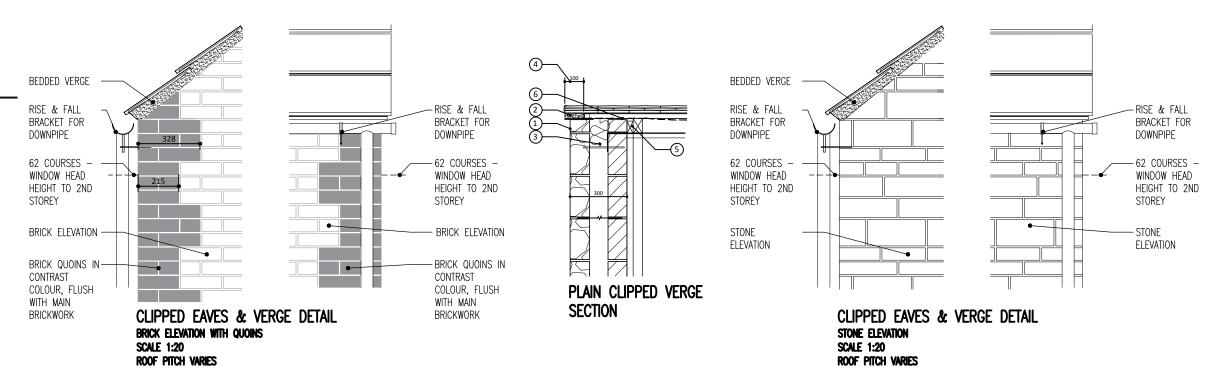

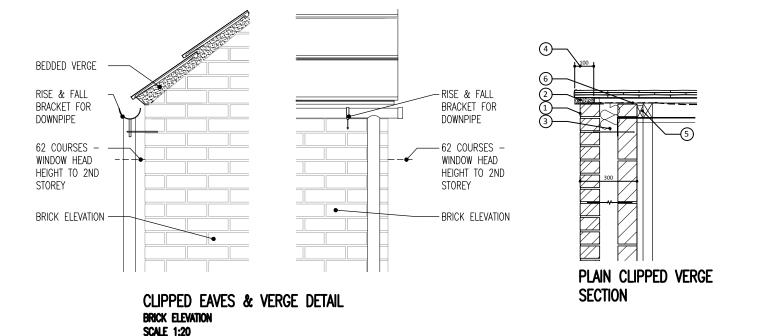

ROOF PITCH VARIES

