DO NOT SCALE FROM THIS DRAWING. USE WRITTEN DIMENSIONS ONLY. ANY DISCREPANCIES OR SUGGESTED REVISIONS TO BE REPORTED TO TAYLOR MMPEY UK.


DRAWING TO BE READ IN CONJUNCTION
WITH LATEST TAYLOR WIMPEY NATIONAL
CONSTRUCTION SPECIFICATION.


Air Barrier Continuity.


Apply continuous ribbons of adhesive along top of wall. Apply expanding foam tope or sealant <u>under</u> the skirting & continuous bead of sealant to the <u>back</u> of the skirting prior to fixing. Where there is no skirting apply expanding foam tape or sealant between plasterboard & floor. Seal ail penetrations in the plasterboard.

LEGEND:


- 1. Brickwork/stone cut to rake of roof.
- 2. Overhang formed by 150mm wide undercloak.
- Min 100mm wide mortar bedding with a mix of 1:3 cement:sand with plasiciser.
- Level top of gable blockwork with mortar to correct pitch.

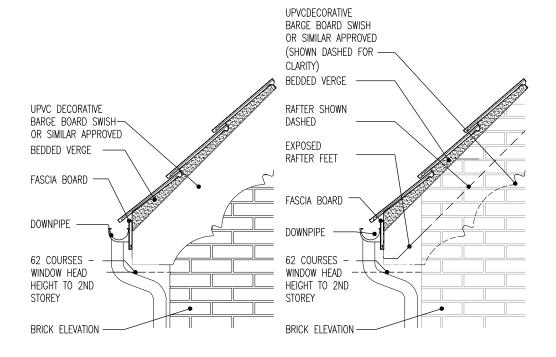


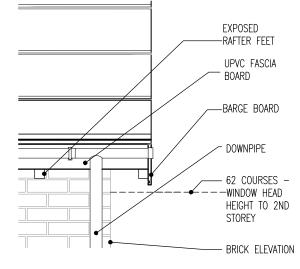

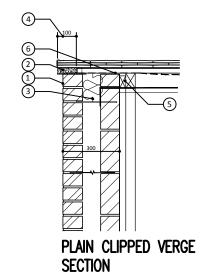

EXPOSED RAFTER FEET, DECORATIVE BARGE BOARD & VERGE DETAIL BRICK ELEVATION SCALE 1:20 **ROOF PITCH VARIES**

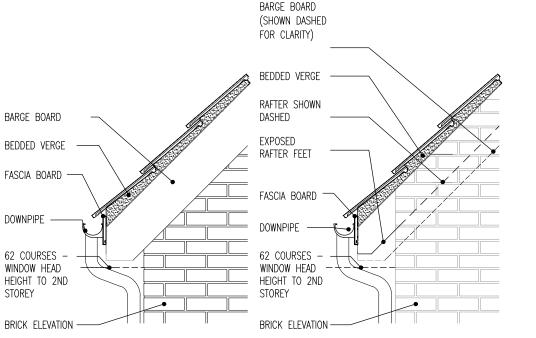

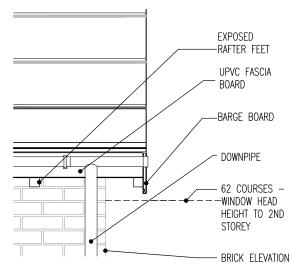

EXPOSED RAFTER FEET EAVES, BARGE BOARD & VERGE DETAIL STONE ELEVATION SCALE 1:20 ROOF PITCH VARIES



Taylor Wimpey Oxfordshire, Windrush Court, Suite J, Abingdon Business Park, Abingdon, Oxfordshire, OX14 1SY t: 01235 541900 f: 01235 541901

AUDLEY GARDENS CHESTERTON

Drawing Title

EAVES AND VERGE DETAILS SHEET 2 OF 2

Date Drawn Checked

02/17 LSD LSD 1:20 @ A3 Consultant Preston Lodge Court, Preston Deanery, Northampton,

NN7 2DS t: 01604 871199 e: info@lsdev.co.uk

Drawing Number

LSD129.06.05

Space

Design

Rev.